

Owner's Manual

***H₂O Sensor - Model 201LS, 201LSHD
& Optional 200DM
Large Square Baler Precision Moisture Sensing Kit***



HarvestTec[®]

EST. 1976

H₂O Moisture Owner's Manual Table of Contents

	<u>Page</u>
Introduction	2
Installation of Star Wheels	3-7
AGCO Balers – Non-UHD Models	3
AGCO Balers – UHD Models	3
Claas Balers	4
CNH BB & LB Balers	4
John Deere L330-L341 Balers	5
Balers Not Listed	6
Alternative Star Wheel Mounting Location	7
Baler Harness Installation	7
Control Box Installation	8
Optional End of Bale Sensor Installation - 200FCA	8
Optional Dye Marker Installation - 200DM	9
Wiring Diagram	10
Downloading H₂O App	11
Screen Definitions	11
Operation	12-13
Reading Moisture	12
Moisture Range	12
Dye Marker System	13
Dye Sprayer Override	13
H₂O Firmware Update through App	14
Pin Outs	15
Parts Breakdown	16-18
Star Wheels	16
Control Box & Harnesses	17
Fixed Chamber End of Bale Sensor Kit	17
H ₂ O Dye Marker	18
Warranty Statement	19

Introduction

Congratulations and thank you for purchasing a Harvest Tec H₂O Moisture Sensing Kit Model 201LS system. Please read this manual carefully to ensure correct steps are taken to attach the system to the baler. This system is designed to read moisture at levels of 5-60%.

Requirements

The H₂O Precision Moisture Sensor app will support operation of the current operating system and one previous version for both Apple and Android devices.

***It is recommended for proper communication that the original phone/tablet power cable is used. Many lower cost power cables do not meet requirements to properly charge and communicate to the Harvest Tec H₂O module.*

Tools Needed

SAE wrench set
Standard screwdriver
Side cutter

Hammer
Measuring tape
SAE socket set

Drill bit set
Center punch

Installation of Star Wheels


Note: Moisture harness leads from main power/comm. harness (006-2470LS) will need to be connected to each moisture sensor prior to final star wheel mounting. Recommend testing the sensor fit without harness attached when determining if sensor clearance issues may be present.

It is recommended to mount the star wheels toward the front of the bale chamber. If using the baler behind a steamer or with a moisture dye marker kit, use the Alternate Star Wheel Mounting Location recommendation. For balers not using a dye marker or being used behind a steamer, use the following mounting instructions:

AGCO Balers (for Non-UHD Models)

The star wheels are to be mounted on top of the baler, just behind the knotters and under the walkway on both sides. The notch and holes for the star wheel are precut. If the star wheels are cutting the twine the sensors and notch must be moved out an additional 1/2" (13mm).


Secure the star wheels with 5/16" x 3-1/4" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

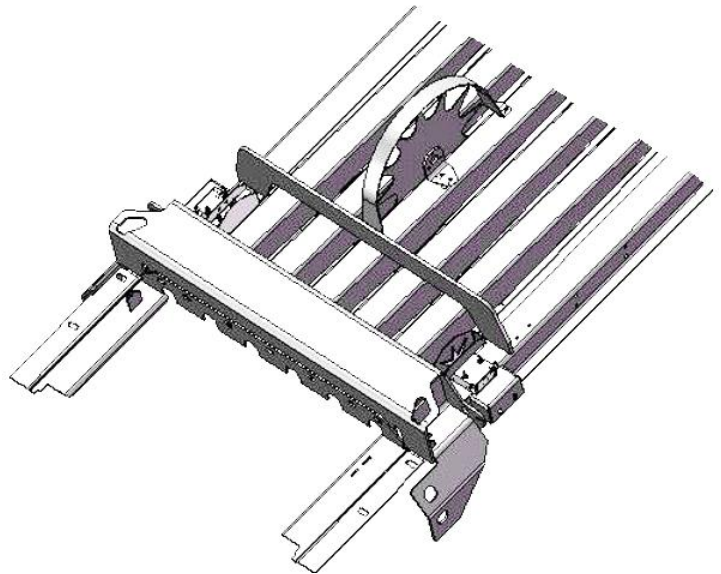

AGCO Balers (for UHD Models)

The star wheels are to be mounted on top of the baler, just behind the knotters and under the walkway on both sides. The holes for the star wheel are precut. Remove the plate on top of the catwalk covering the triangle shaped access cutout. Place star wheel over the predrilled holes on both sides of the bale chamber, (right).


Secure the star wheels with 5/16" x 3-1/4" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

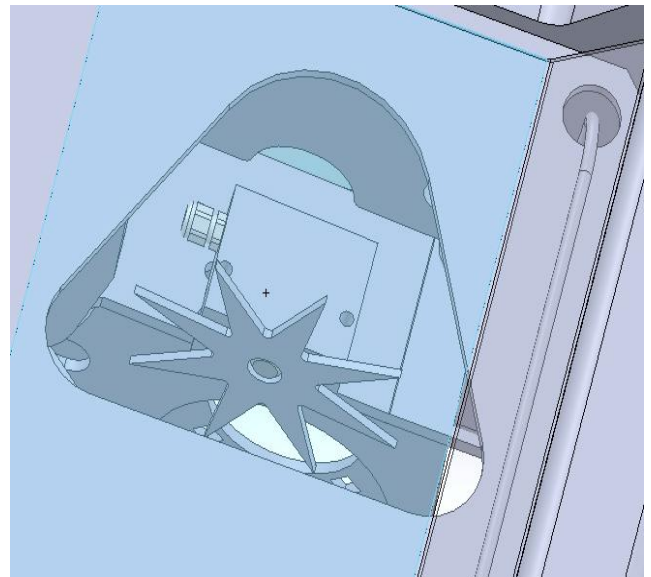

Installation of Star Wheels (continued)


Claas Balers

Use the picture right as a guide for drilling the mounting holes for the star wheels. The star wheels are to be mounted on the side of the bale chamber, between the top and middle channel. Measure 10" back from the hinge between the top and middle channel. Cut 1" x 9" (25mm x 23cm) slot for the star wheel. Make sure the wheel is square to the rails on the door.

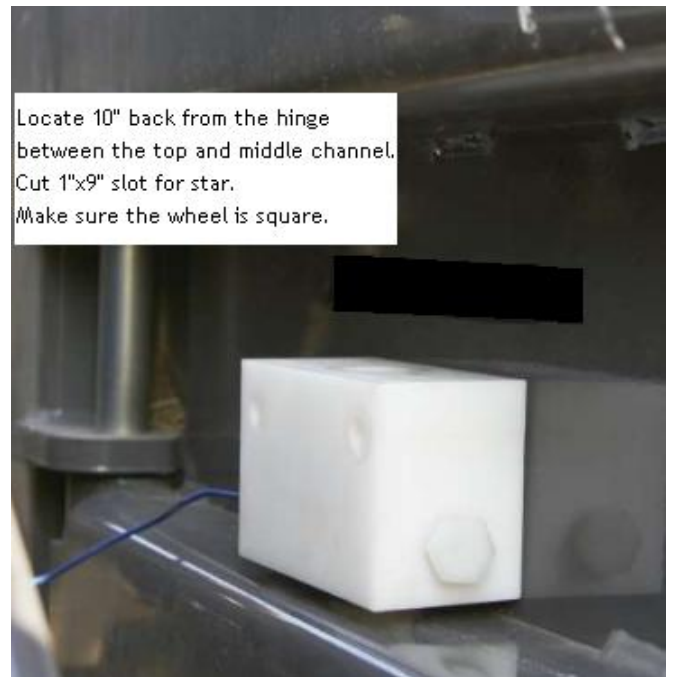


Mark the location of the two 5/16" (8mm) holes for the star wheel base. After drilling the holes, insert the 5/16" x 3-1/4" allen head bolts through the chute. Secure the star wheels with 5/16" x 3" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

CNH BB & LB Balers

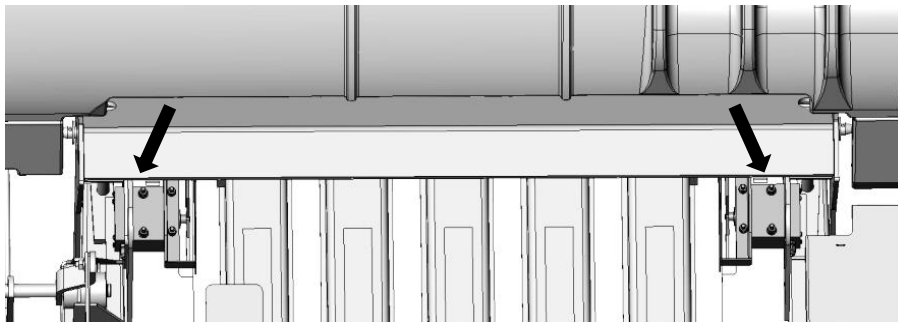

Use the picture above as a guide to mounting the star wheels. Locate the two star wheel moisture sensors (030-4642UX) and twine diverters (001-4644 & 001-4645). Directly behind the knotters, locate the four predrilled holes per side shown at the arrows. This location is also beneath the lift points on top of the baler.

Secure the star wheels with 5/16" x 3-1/4" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

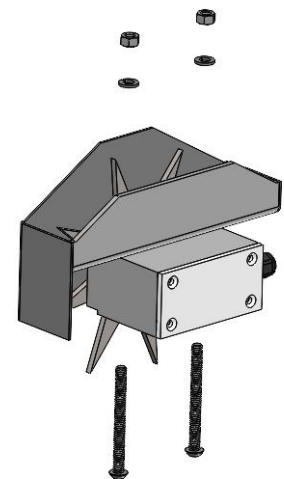


Installation of Star Wheels (continued)

John Deere L330-L341 Balers



Remove any material from the bale chute. The star wheels are to be mounted on the transition bracket on both sides of the bale chute located after knotters (shown right). Holes have been installed at the factory, however brackets will need to be removed and modified by removing 3/4" (19mm) off the bracket (indicated below) to allow for proper star wheel assembly spacing.

Once bracket modification is complete, touch up with spray paint to prevent rusting. Use factory carriage bolts and mount the transition bracket back in original bracket mounting holes (**A**) before mounting star wheel assembly (**C**). Insert the 5/16" x 3-1/4" allen head bolts up through the transition bracket (**B**). Place the star wheel block over the bars placing spacer plate (001-6707ES) between star wheel block and factory bracket. Place twine guard on top of star wheel (**D**), the guard containing the two extra holes will be placed on the right side. Secure with 5/16" nuts and lock washers. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

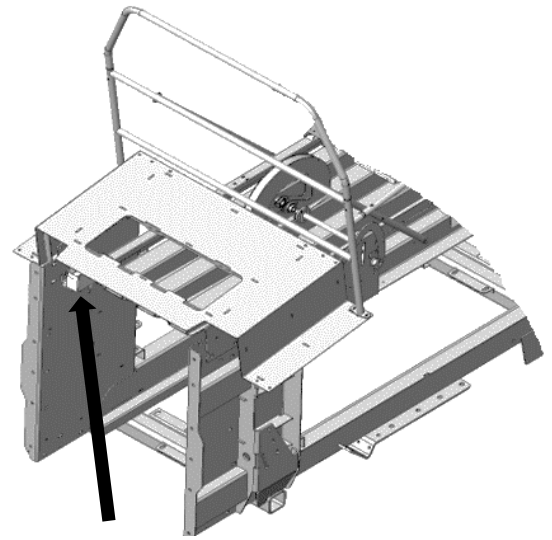

Transition Bracket Location

Cut 3/4" Off Bracket

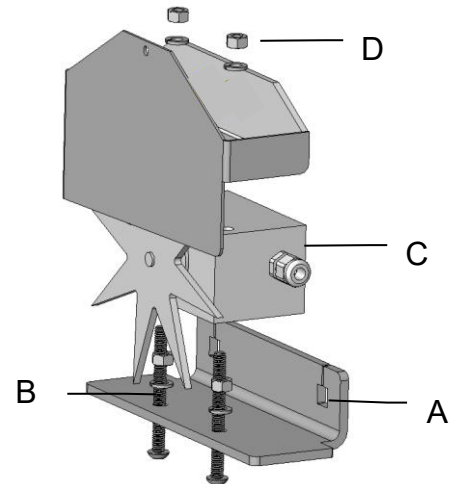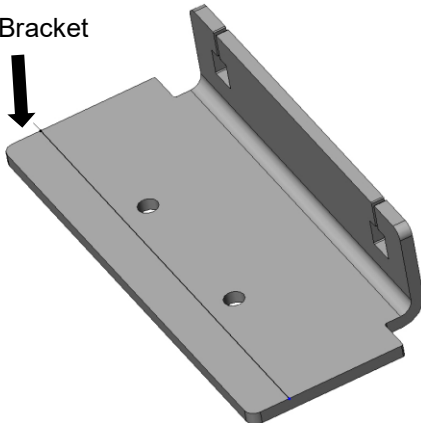


Star wheel assembly

Installation of Star Wheels (continued)

Balers Not Listed - All Other Balers

Mount star wheels under the walkway on top of the baler behind the knotters. Remove the bale from the chute and tip the walkway up for access. Locate star wheel template on the outside corner angles of the bale chute on the left and right side of the baler.

The center of the wheel shaft will be approximately 5-1/2" (13cm) in front of the walkway support or about halfway between the walkway support and the cross frame almost directly in front of it. The notch will start just in front of the walkway support.

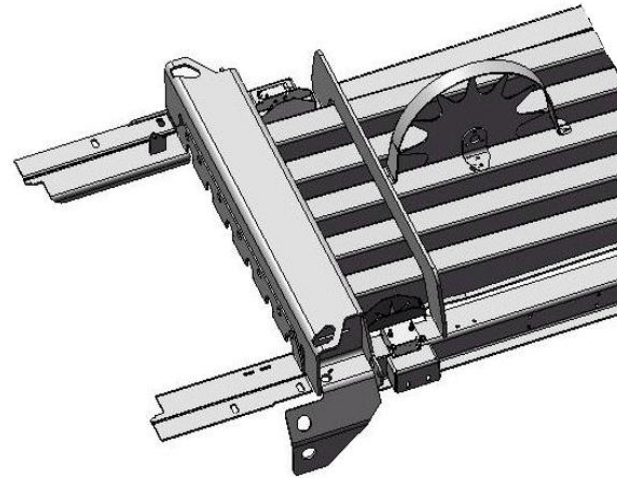

Two parts of the baler frame will have to be trimmed on both sides to mount each star wheel. The first is the outside corner angles of the chute. Use template to mark the location of the star wheel notch as well as the location of the holes for the star wheel block. The notch will be 5/8" by 9" (16mm x 23cm) long and will help keep the wheel away from the twine. Spray the ground off areas with touch up paint to prevent rusting.

The second portion of the baler to trim off is the end of the gusset that may interfere with the star wheel's plastic base support. Center the star wheel in the slots that was just notched and check for interference with the gusset.

Drill two 5/16" (8mm) holes for the star wheel block. Secure the star wheels with 5/16" x 3-1/4" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.

Installation of Star Wheels (continued)

Alternative Star Wheel Mounting Location

If steam is being added to the bales prior to the crop entering the chamber, positioning the star wheels at the rear of the bale chamber will allow the star wheels to accurately read the moisture.

Placement of star wheels at the rear of bale chamber allows for moisture dye marking in the middle of both sides of bales

Two parts of the baler frame will have to be trimmed off on both sides to mount each star wheel. The first is the outside corner angles of the chute. To mark the location of the star wheel notch as well as the location of the holes for the star wheel base. The notch will be 5/8" by 9" (16mm x 23cm) long and will help keep the wheel away from the twine. Spray the ground off areas with touch up paint to prevent rusting.

The second portion of the baler to trim off is the end of the gusset that may interfere with the star wheel's plastic base support. Center the star wheel in the slots that was just notched and check for interference with the gusset.

Drill two 5/16" (8mm) holes for the star wheel block. Secure the star wheels with 5/16" x 3-1/4" BHCS (x2 each side) from the bottom side. Blocks are dropped down on the bolts and secured in place with the spacer plate (001-6707ES) placed between the star and bale chamber and star wheel twine guard (001-4645H or 001-4644H) on top of star wheel block. Place twine guard with the two extra holes (001-4644H) on the right side of the baler. Secure with 5/16" lock washers and nuts. Be sure to hand tighten bolts with wrench or ratchet - not exceed 13 ft-lb torque. **DO NOT USE AN IMPACT TO TIGHTEN.** Over torquing star wheel mounting hardware can cause pre-mature wear of the star wheel blocks.



Baler Harness - Installation (006-2470LS)

Star Wheel Connections:

Remove the four screws holding the star wheel block cover. Loosen the wire grommet and feed one wire eye loop end from harness into star block. Remove nut on the star wheel swivel, place eye loop over swivel and carefully tighten down nut to connect harness to swivel. Tighten wire grommet to secure wire and reinstall the block cover using original hardware.

Harness Routing:

Route the 006-2470LS harness along the baler towards the front of the baler. Harness will connect to the H2O Power Harness at the hitch. Use zip ties to secure wires away from any moving parts and hydraulic hoses as to not interfere with normal baler use.


Control Box Installation (006-2473)

Locate a safe location in the cab of the tractor to place the Control and connect a USB cable ending in a USB-A plug to connect to the display device (smartphone or tablet).

Connect the main plug of the Power Harness (006-2470P) to control box and the other plug at the hitch to the Main Baler Harness (006-2470LS, 006-2470SS or 006-2473RB).

The control box (006-2473) is equipped with a green light to indicate both power and connection.

Plug the tablet/phone cord into the tablet communication port (closest to light) indicated by:



Slow Blink – System has power but not connected to phone or tablet.

Solid Green – Device is connected.

****A quality data communication/power cable ending in a USB-A plug is required. Many lower cost power cables do not meet requirements to properly charge and communicate with the Harvest Tec H2O module. Use of adapters is not supported. Optional communication cables are available by ordering through Harvest Tec, if needed: USB-C to USB-A cable (006-6672USBX) or Lightning to USB-A cable (006-6672USBC).**

Optional End of Bale Sensor Kit – 200FCA



The end of bale sensor is used to determine when the baler needle arm moves. With this information the system is able to show the average moisture of the previous bale.

Installation

Mount the EOB Sensor (006-7400) to Mounting Bracket (001-4648RB) as shown below. Mount the assembly on the right side of the baler chamber. The face of the sensor needs to be parallel to the arm attached to the needles. *Note: The bracket may need to be slightly bent for the proper positioning.

Mark and drill two 3/8" (10mm) holes. Install the sensor using two 5/16" x 1" allen head bolts, locks, and nuts. The end of the sensor needs to be no greater than 1/4" (7mm) away from the needle arm. Tighten nuts on sensor after adjustment.

Connect EOB sensor to the plug labeled 'EOB' on main harness (006-2470LS or 006-2470SS). Use of Extension Harness (006-7400EXT) may be required. Secure sensor harness with cable ties, taking care to avoid pinch points and hydraulic lines.

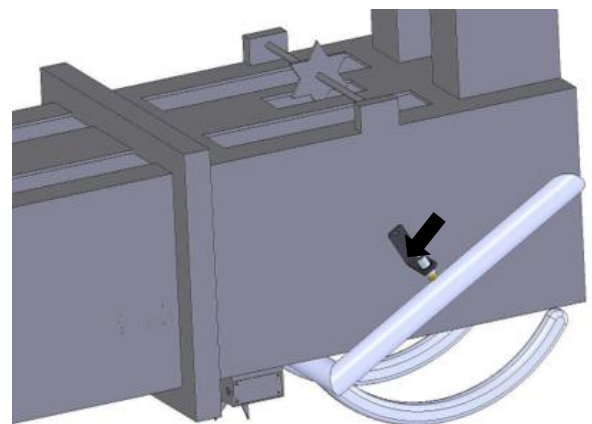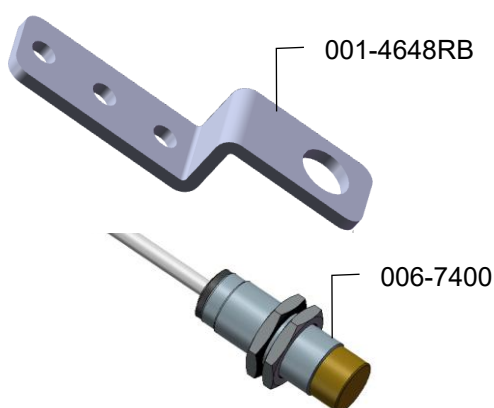

Optional Dye Marker Kit– 200DM

Tank Installation – for Square Balers

Locate the Dye Marking Tank and Pump Assembly (005-9015). Identify a suitable mounting location for the tank on the side of the baler away from moving parts and hydraulic lines. Be sure location is within 10' of the wire plug connection on the Baler Power/Comm Harness (006-2470LS or 006-2470SS), See Wiring Details in the Wiring Diagram section of this manual.

Once a suitable mounting location has been identified, mount the tank vertically as shown (right) with the tank lid on the top by using the included mounting hardware. **Note:** Tank mounting location may be different for each baler model. Due to baler design variations and modifications, Harvest Tec does not offer specific mounting location: specific location is at the installer's discretion.




Nozzle Installation

Next locate the dye marking spray assemblies shown (below).



Small Square and Large Square balers must use Brass Tip (004-TX-5)

Nozzle straps should be placed directly below (or in line) with the star wheels so spray will be applied on the side of the bale. Mount the second tip assembly on the left side of the baler in a similar position (see picture right).

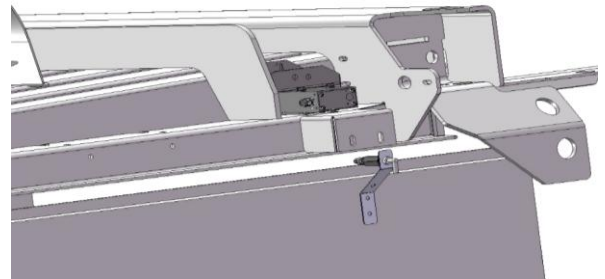

Alternative Dye Marking Nozzle Mounting Location

When using the Alternative Star Wheel Mounting location at the end of the bale chamber, place the dye marking nozzles on the rear of the bale chamber as shown below. Placement of star wheels at the rear of bale chamber allows for moisture dye marking in the middle of both sides of bales.




Routing the Hose

Connect the supplied 1/4" Hose (002-9006) to the pump and secure with hose clamp (003-9002). Route the hose to each tip assembly on each side of the baler and connect to main supply line from tank by using the 1/4" barbed tee (003-T1414). Secure hose to barb fittings using hose clamps. Be sure to leave ample slack in line to allow for bale chamber adjustments. Secure away from moving parts, pinch points and hydraulic lines. Secure hose to baler using cable ties.

Wiring Diagram – Large Square Balers

1. Connect the power harness (006-2470P) to the tractor convenience outlet keyed power switch using the red wire with fuse to the positive side and the black wire to the negative.
 - a. Any modifications of the power harness will void the warranty. Contact Harvest Tec before modifications are made.
2. The power harness (006-2470P) will mount on the tractor connected to the control box (006-2473LB) with the 12 pin male deutsch connection and the opposite end down to the draw bar.
3. Connect the Baler Pwr/Comm Harness (006-2470LB) to the power harness (006-2470P).
4. Route the Pwr/Comm Harness (006-2470LS) on the baler to each moisture sensor (030-4642UX) on both sides of bale chamber.
5. Connect the USB charging/comm cord for the phone or tablet being used to that device and the 201 Control Box (006-2473LB).
6. When using a Dye Marker, the End of Bale Sensor kit (200FCA) will need to be added to the system in order to see when needle arm cycles. Connect the sensor to the End of Bale (EOB) connection on the Baler Pwr/Comm Harness (006-2470LS).
7. When using the optional Dye Marker (200DM) connect 4 pin round end of the H2O harness (006-2470C) to the Dye Marker (DM) connection on the (006-2470LS) harness. Then connect the two straight spade connections with only the white wire to the push switch (006-2850). The remaining two connections with 90 degree female spades will connect to the pump.

System Wiring Diagram

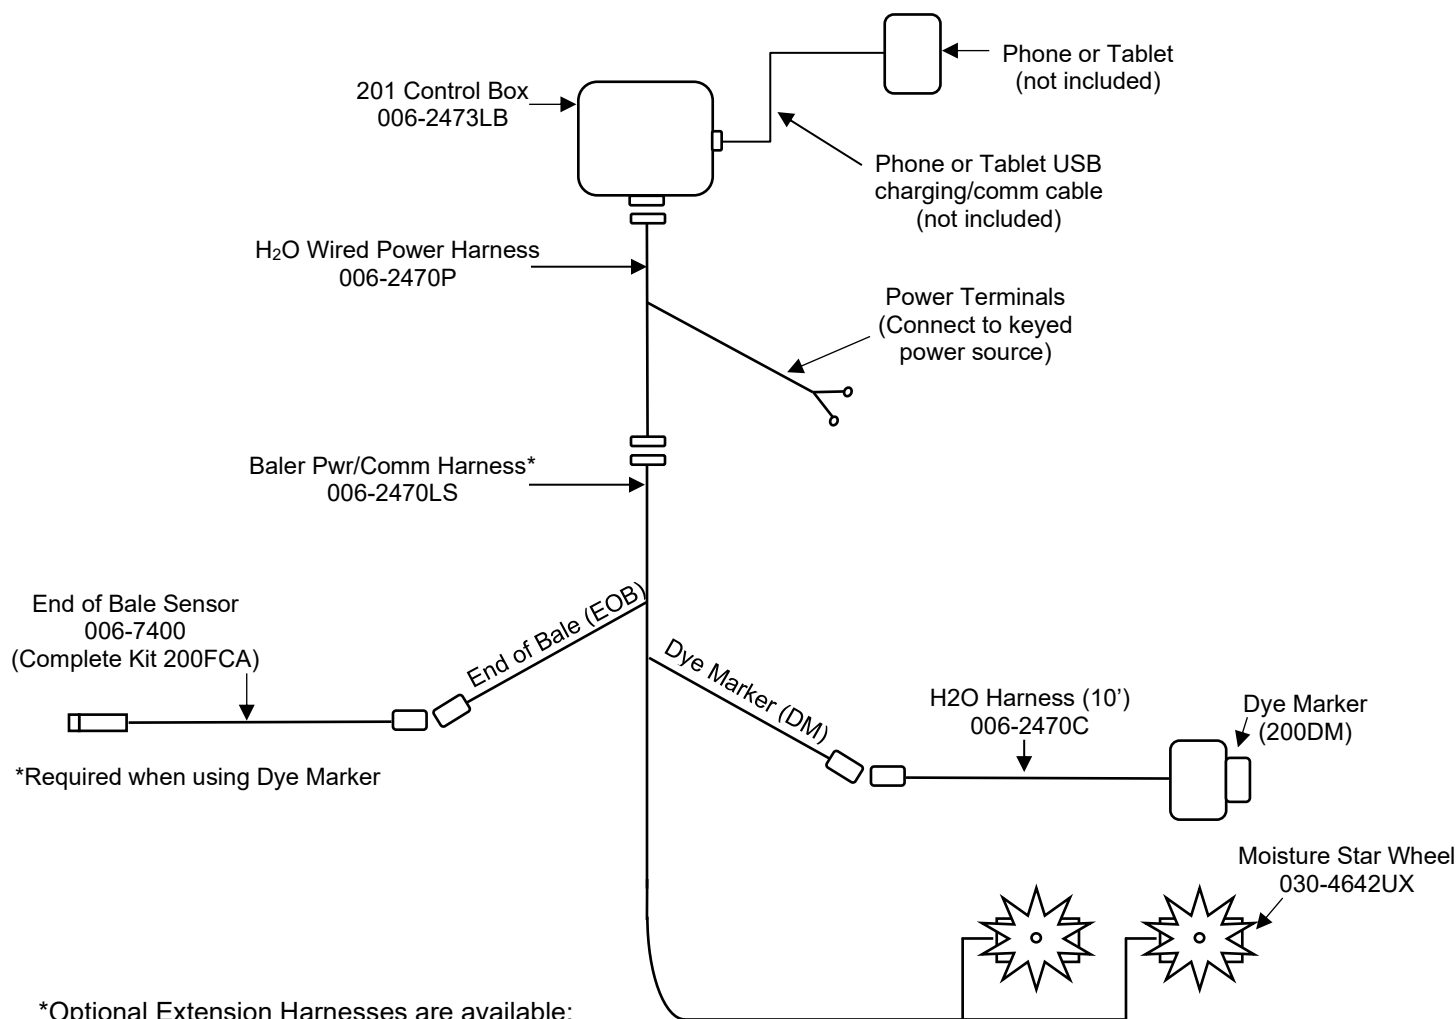

*Optional Extension Harnesses are available:
 8' Pwr/Comm Extension Harness (006-2470BL2)
 30' Pwr/Comm Steamer Extension Harness (006-2470BL3)

Downloading H₂O App

The H₂O App is available on any Apple or Android device running with the current operating system software and one previous version. Download the app by searching for H₂O Sensor. App icon shown right.




Screen Definitions

Main Screen

Brightness Adjustment –
Tap to switch between day and
night time brightness

Current Moisture Reading –
Information will display once hay
enters the bale chamber

Current App Version
(example)

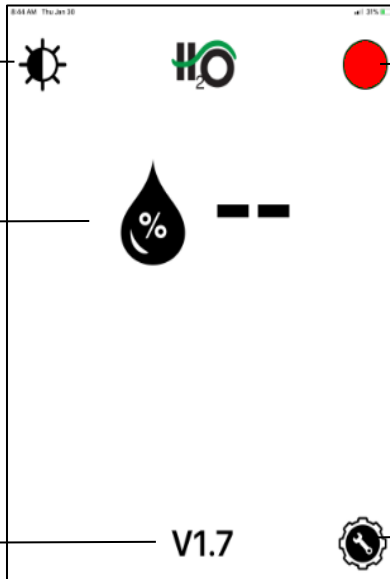

Connection Signal - When
connection is made with the
control box light will turn Green


Red – Not Connected
Green - Connected

Settings Tab – Select to
switch to Settings Screen

Settings Screen

Dye Marker System

Home Tab – Select to
change to Home Screen

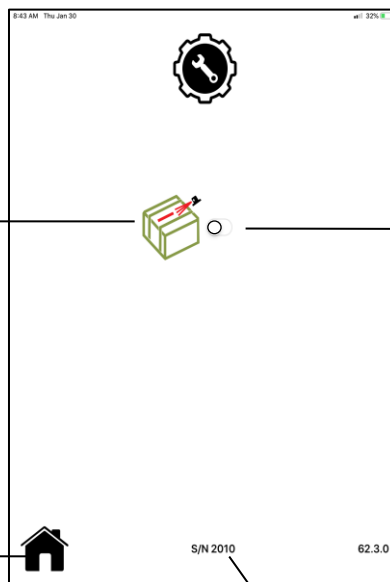

On / Off Slide – Slide to the right to turn
On Setting. The bar will turn red or
green (dependent on device)


App Version

Serial Number of System

Operation


After installation of the H₂O app, turn the system on by turning the key in the tractor on. When the connection is made the green light on the control box will illuminate.

Reading Moisture

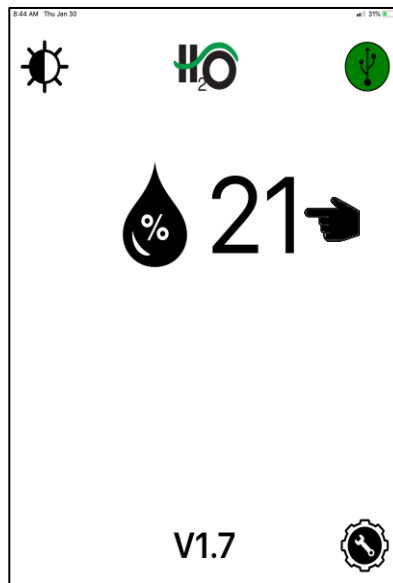


When hay begins to enter the bale chamber,
current moisture will be displayed

Moisture Range 5-60%

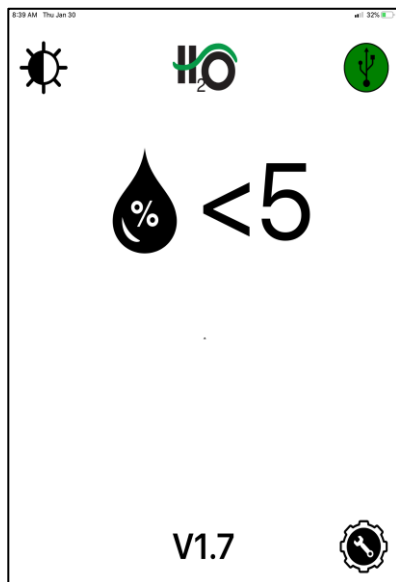


If the moisture being read is Less Than 5% the
reading will appear as shown above

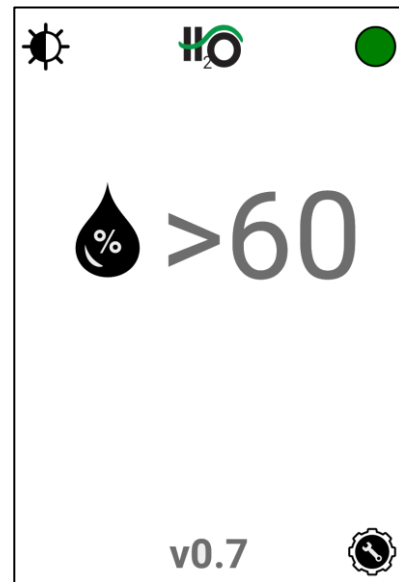

If the moisture being read is Greater Than 60%
the reading will appear as shown above


Operation (continued)

Dye Marker System

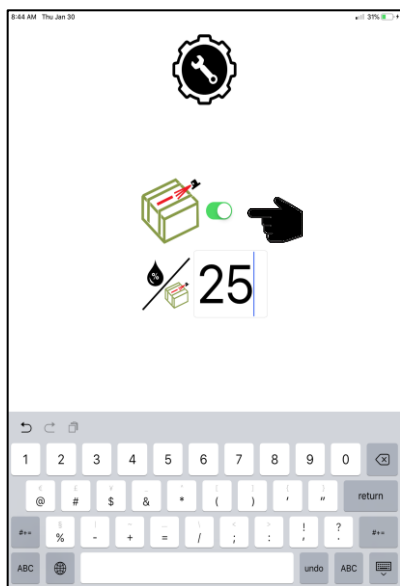

When using the dye marker turn on the setting as shown and select the desired moisture to mark a bale.

*Bales at or above this moisture level will be marked.

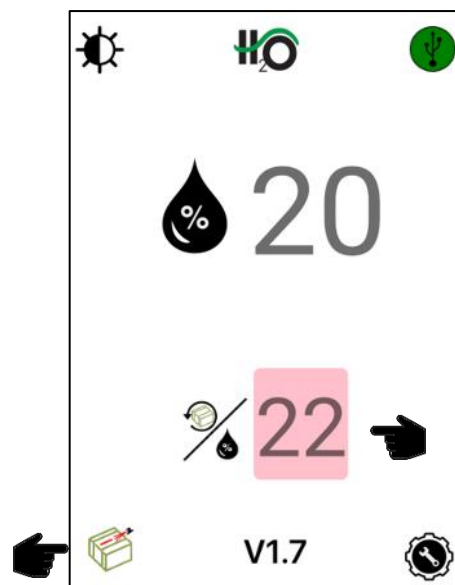


Dye Marker icon will now appear on the home screen.

The last bale moisture will be highlighted in red and the bale will be marked at or above the set moisture.

Dye Marker Notes

- When the Dye Marker is activated by the moisture setting it will spray 3 seconds once per End of Bale (EOB) cycle. After an EOB signal the dye marker is then reset to be able to spray again for 3 seconds once on the next bale.
- A full tank of dye is estimated to mark 50-60 bales.

Dye Marker Override

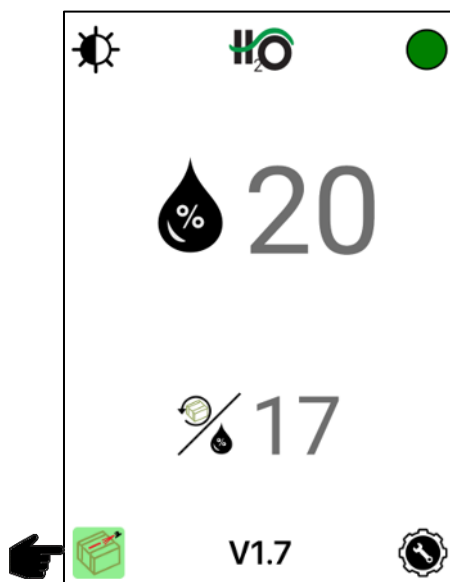

If you want to mark a bale for any reason, press the bale icon to activate the sprayer. The icon will turn green.

*When the manual override is used, the last bale moisture will not highlight in red.

The manual spray function can be used on a bale as many times as preferred in 3 second intervals.



H₂O Firmware Update through App

When there is an update available for the H₂O system the following information will appear and the steps listed will need to be followed.

Once an operator downloads the app update (internet connection required) the “update available” symbol will appear along with the version number of the available update once connected to the system.

At this point the system can run without updating if the operator chooses. The icon will simply remain on the screen.


Once the operator decides to perform the software update, they will press the version number or upload arrow to begin. Internet connection is not required to perform the update to the module once the app is downloaded

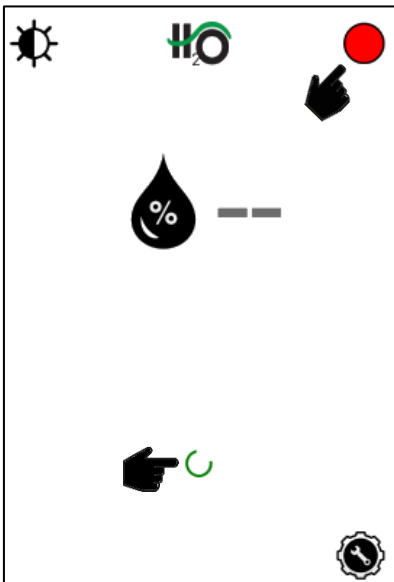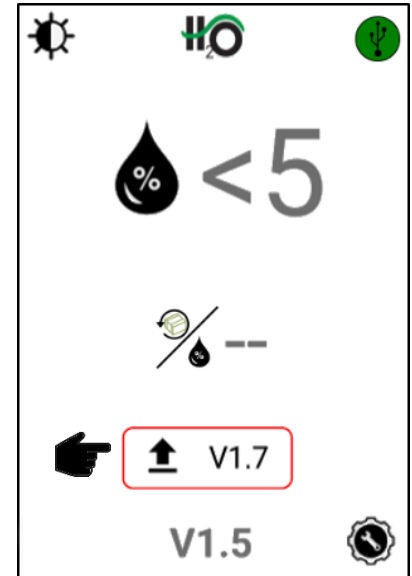

Once the update is initiated, the system will enter update mode


The status light will turn red

A green loading symbol will begin to circulate on the screen

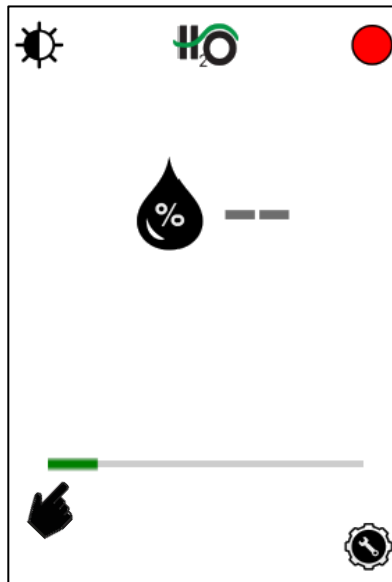

A status bar with then appear to show the update progress

This can take 3-5 minutes to load software

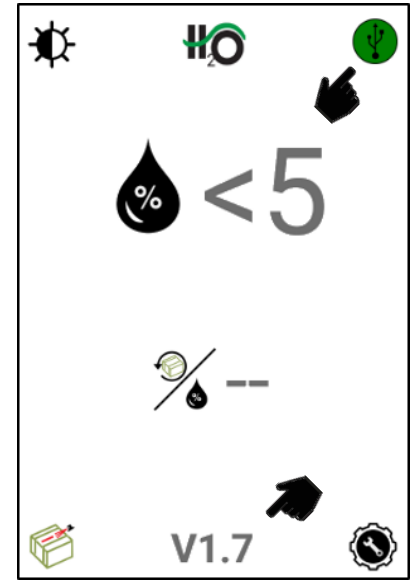

Once the status bar load completely, the system will boot back up


The status light will again turn green

The updated version number will be shown at the bottom of the screen

Pin Outs


H2O Tractor Module (006-2473)

Pin 1	Red	Module Power
Pin 2	Red/Black	EOB +
Pin 3	Black	EOB -
Pin 4	Grey	Left Moisture Sensor
Pin 5	Brown	Right Moisture Sensor
Pin 6	Purple	EOB Signal
Pin 7	Yellow	CAN +
Pin 8	Green	CAN -
Pin 9	Red/White	Dye Marker 12V +
Pin 10	Black/White	Dye Marker 12V -
Pin 11	Blue	Dye Marker Prime
Pin 12	Black	Ground

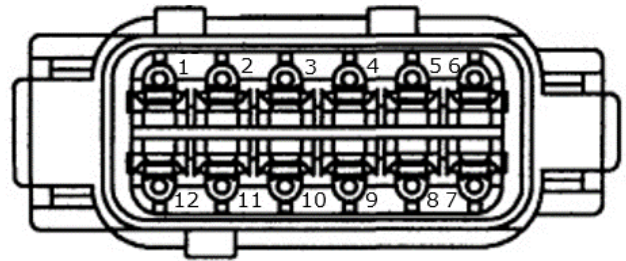


H2O Tractor Harness (006-2470P) at Module Plug

Pin 1	Red	Module Power
Pin 2	Red/Black	EOB +
Pin 3	Black	EOB -
Pin 4	Grey	Left Moisture Sensor
Pin 5	Brown	Right Moisture Sensor
Pin 6	Purple	EOB Signal
Pin 7	Yellow	Not Used
Pin 8	Green	Not Used
Pin 9	Red/White	Dye Marker 12V +
Pin 10	Black/White	Dye Marker 12V -
Pin 11	Blue	Dye Marker Prime
Pin 12	Black	Ground

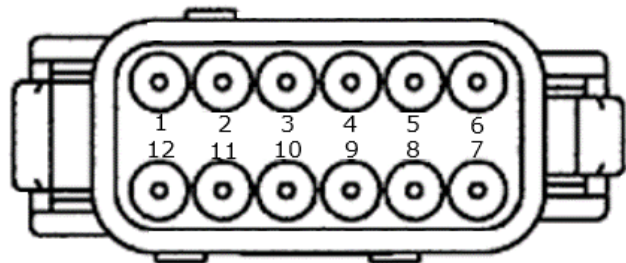


Baler Communication Harness (006-2470) at Hitch

Pin 1	Red/Black	EOB +
Pin 2	Black	EOB -
Pin 3	Grey	Left Moisture Sensor
Pin 4	Brown	Right Moisture Sensor
Pin 5	Purple	EOB Signal
Pin 6	Red/White	Dye Marker 12V +
Pin 7	Black/White	Dye Marker 12V -
Pin 8	Blue	Dye Marker Prime

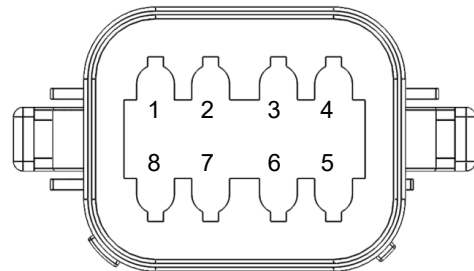


End of Bale Sensor (EOB) (006-2471B)

Pin 1	Brown	EOB +
Pin 2	Blue	EOB -
Pin 3	N/A	Not Used
Pin 4	Black	EOB Signal

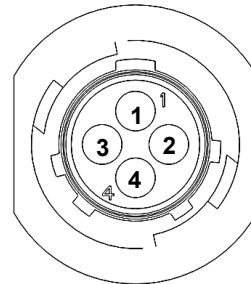


Dye Marker H2O Harness (006-2470C)

Pin 1	Red	DS +
Pin 2	Black	DS -
Pin 3	White	DS Prime
Pin 4	N/A	Not Used

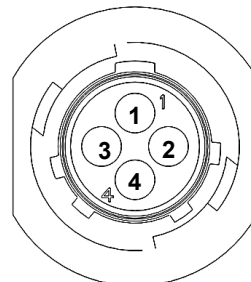

Star Wheel Sensors (030-4642UX)



For All Systems Pre-700 Series – Updated Jan 2026

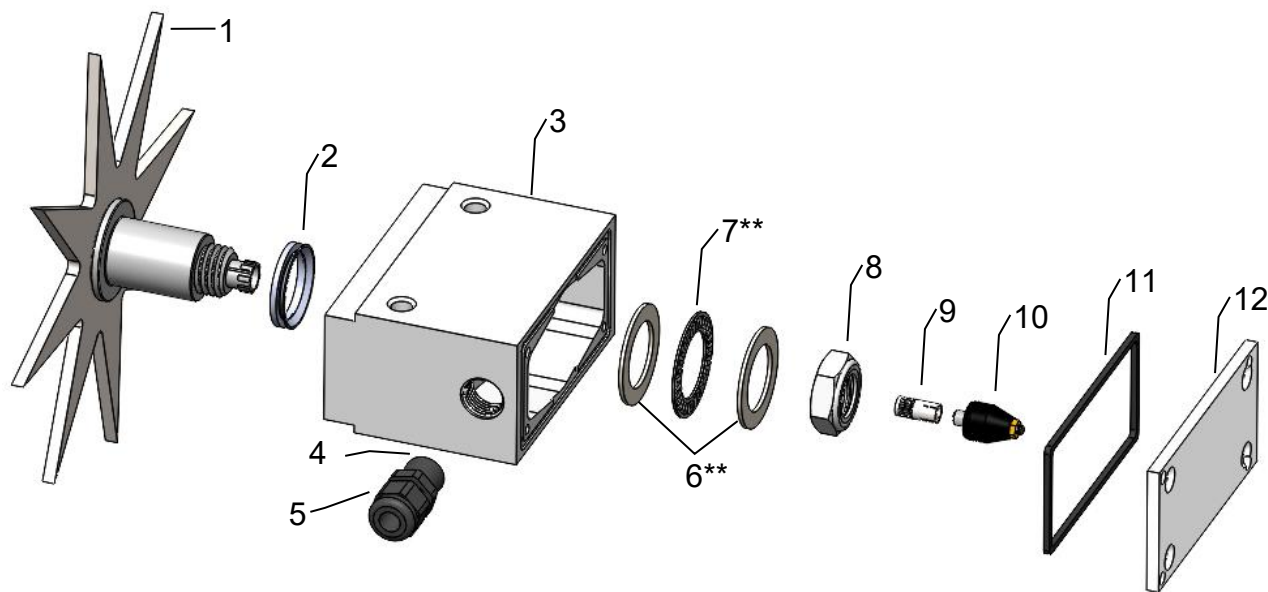


<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Star Wheel	006-4642US	1	8	Star Wheel Nut	006-4642U	1
2	Dust Seal Gasket (Some pre-2024 used 2)	006-4642UG	1	9	Swivel Insert	006-4642B	1
3	Star Wheel Block (Avail. in 2026 style only)	006-4642UB	1	10	Electric Swivel	006-4642A	1
4	3/8" Wire Grommet	008-0821A	1	11	Star Wheel Block Gasket (Fits pre-2024 block style)	006-4642UG	1
5	3/8" Grommet Nut	008-0821B	1	11	Star Wheel Block Gasket (Fits 2024 newer blocks)	006-4642UG2	1
NP	Spacer (only used in some of the pre-2024 blocks)	006-4642UBS	1	12	Block Cover (Fits pre-2024 block style)	006-4642UC	1
6	Thrust Bearing Washer	006-4642TA	2	12	Block Cover (Fits 2024 newer block style)	006-4642UC2	1
7	Thrust Bearing	006-4642TB	1	13	Twine Guard -Left	001-4645H	
**	Bearing Washer (Replaces parts 6 & 7)	006-4642W	1	14	Twine Guard -Right	001-4644H	
NP	Star Wheel Spacer Plate (use one per star wheel)	001-6707ES					
NP	S.W. Drilling Template	001-4642T					

Bearing Rebuild Kit (parts 2, 6-8) 006-4642UK

Complete Universal Assembly 030-4642UX

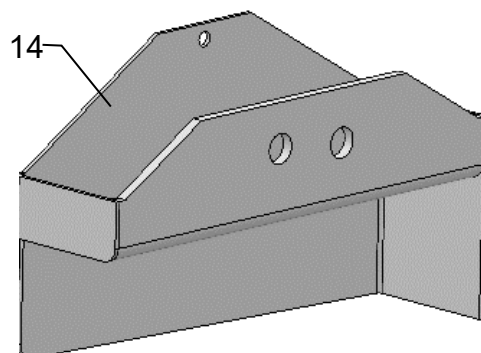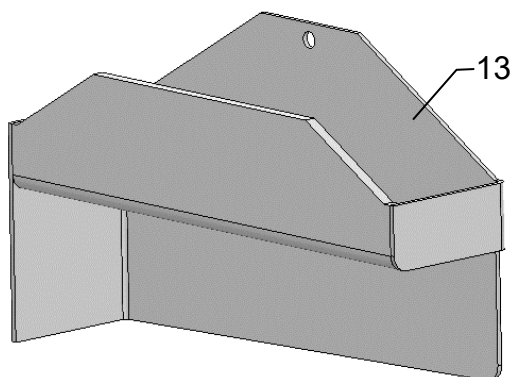

H₂O Control Box & Harnesses For Large Square Balers

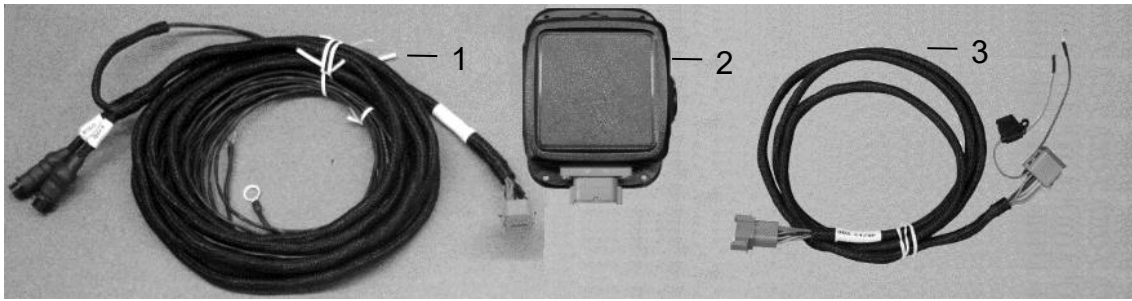


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Baler Power/Comm Harness	006-2470LS	1
2	201 Series Control Box	006-2473LB	1
3	Tractor Power Harness	006-2470P	1

Optional Extension Harnesses:

NP	8' Power/Comm Harness Ext.	006-2470BL2
NP	30' Power/Comm Steamer Ext.	006-2470BL3


Optional End of Bale Sensor Kit - (200FCA)

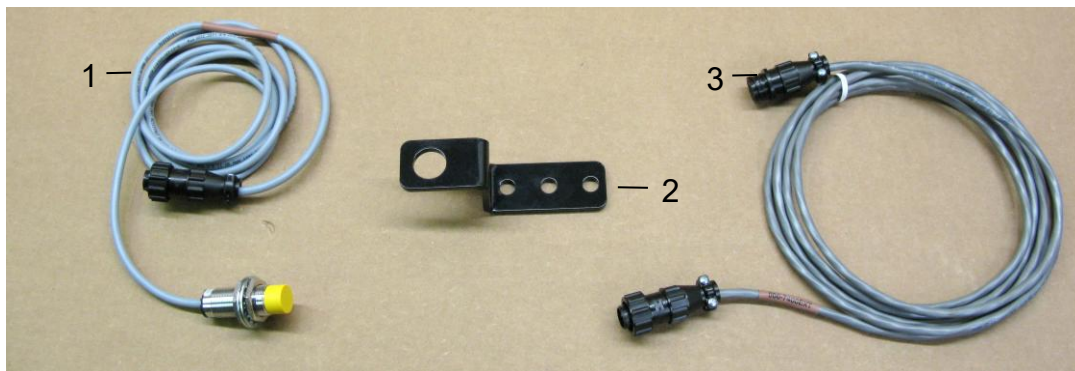

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	End of Bale Sensor	006-7400	1	3	EOB Extension	006-7400EXT	1
2	End of Bale Bracket	001-4648RB	1				

Complete Kit 030-200FCA

Optional H₂O Dye Marker Kit - 200DM

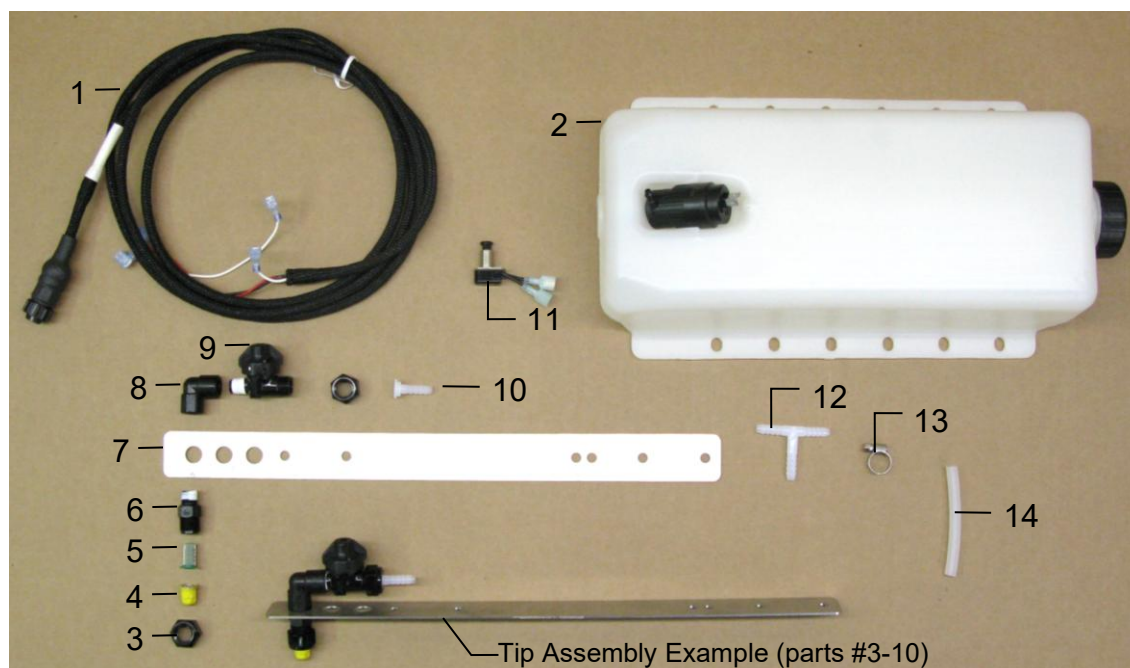

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	H2O Harness (10')	006-2470C	1	8	1/4" Street Elbow	003-SE14F	2
2	Tank & Pump	005-9015	1	9	Check Valve	007-1207VB	2
3	Nozzle Cap	004-4723	4	10	1/4" Straight Fitting	003-A1414VB	2
4	Tip - Brass	004-TX-5	2	11	Push Switch	006-2850	1
5	Tip Strainer (Green)	004-1203-100	2	12	1/4" All Barb Tee	003-T1414	1
6	Nozzle Body	004-4722	2	13	Mini Hose Clamp	003-9002	6
7	Nozzle Holder	001-4215	2	14	1/4" Hose	002-9006	40
NP	Red Dye (Refill)	009-0800	1	NP	End of Bale Sensor Kit	030-200FCA	1

Complete Assembly

030-200DM

Harvest Tec LLC. Warranty and Liability Agreement

Harvest Tec, LLC. will repair or replace components that are found to be defective within 12 months from the date of manufacture. Under no circumstances does this warranty cover any components which in the opinion of Harvest Tec, LLC. have been subjected to negligent use, misuse, alteration, accident, or if repairs have been made with parts other than those manufactured and obtainable from Harvest Tec, LLC.

Our obligation under this warranty is limited to repairing or replacing free of charge to the original purchaser any part that in our judgment shows evidence of defective or improper workmanship, provided the part is returned to Harvest Tec, LLC. within 30 days of the failure. If it is determined that a non-Harvest Tec branded hay preservative has been used inside the Harvest Tec applicator system where the failure occurred, then Harvest Tec reserves the right to deny the warranty request at their discretion. Parts must be returned through the selling dealer and distributor, transportation charges prepaid.

This warranty shall not be interpreted to render Harvest Tec, LLC. liable for injury or damages of any kind, direct, consequential, or contingent, to persons or property. Furthermore, this warranty does not extend to loss of crop, losses caused by delays or any expense prospective profits or for any other reason. Harvest Tec, LLC. shall not be liable for any recovery greater in amount than the cost or repair of defects in workmanship.

There are no warranties, either expressed or implied, of merchantability or fitness for particular purpose intended or fitness for any other reason.

This warranty cannot guarantee that existing conditions beyond the control of Harvest Tec, LLC. will not affect our ability to obtain materials or manufacture necessary replacement parts.

Harvest Tec, LLC. reserves the right to make design changes, improve design, or change specifications, at any time without any contingent obligation to purchasers of machines and parts previously sold.

Revised 6/22

HARVEST TEC, LLC.
P.O. BOX 63
2821 HARVEY STREET
HUDSON, WI 54016 USA
PHONE: 715-386-9100
FAX: 715-381-1792
Email: info@harvesttec.com